TV Stand

ASSEMBLY INSTRUCTIONS

PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE USE
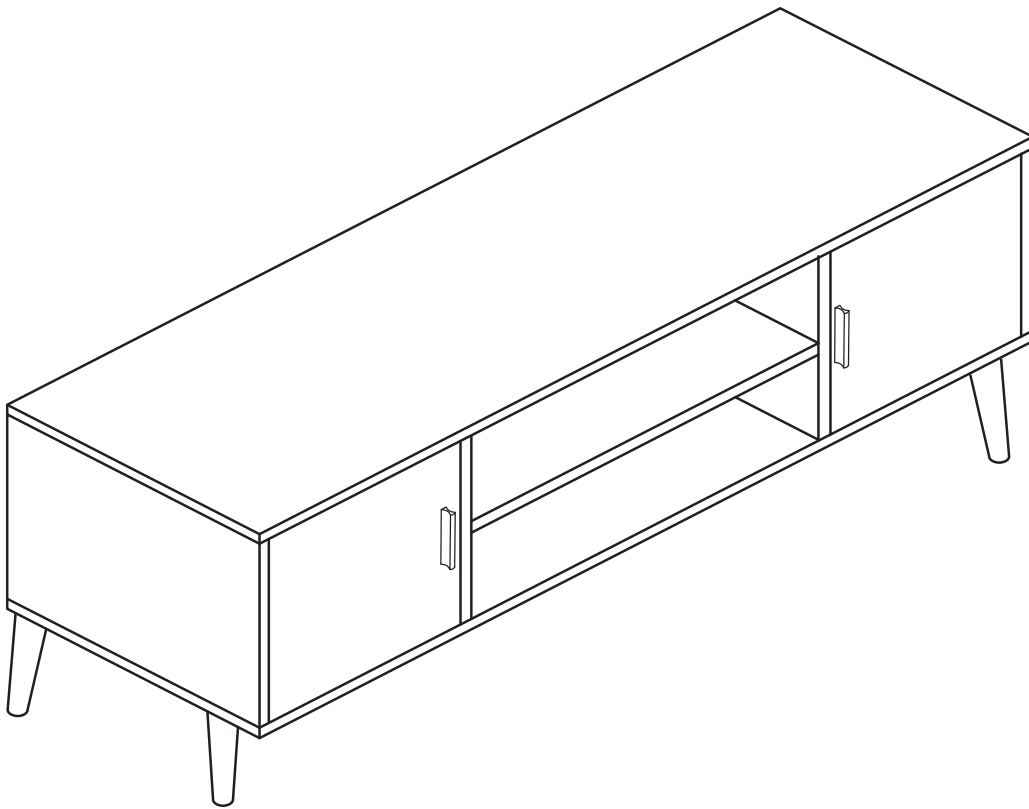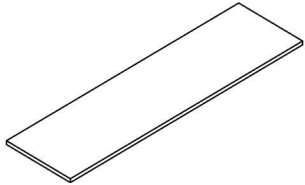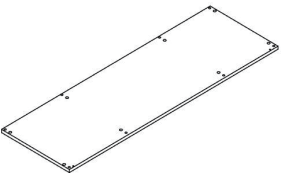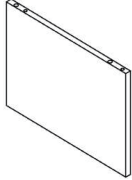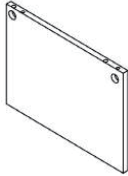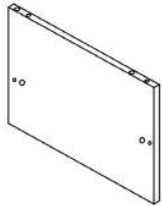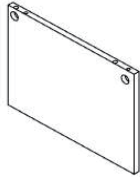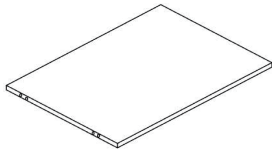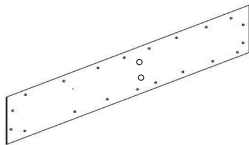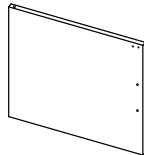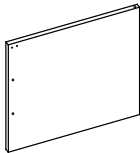
Hardware

Label	Picture	Description	QTY
①		Cam Bolt	12
②		Dowel (M6X30mm)	20
③		Cam Nut	12
④		Screw (M2.5x10mm)	18
⑤		Screw (M4x14mm)	22
⑥		Screw (M3x16mm)	4
⑦		Screw (M3x12mm)	4
⑧		Metal Plate	4
⑨		Magnet	2
⑩		Door Pin	4
⑪		Magnetic Bar	2
⑫		Screw (M4x40mm)	10
⑬		Screwdriver (Not provided)	1

Restraint Device Hardware

⑭		Height Adjustment Screw	1
⑮		Wall Anchor	2
⑯		Screw (M4x16mm)	4
⑰		Restraint Strap	2
⑱		Metal Gasket	2
⑲		Hammer (not provided)	1
⑳		Power Drill (not provided)	1

Parts List

Label	Picture	Description	QTY
A		Top Panel	1
B		Bottom Panel	1
C		Left Side Panel	1

D		Middle Left Side Panel	1
E		Middle Right Side Panel	1
F		Right Side Panel	1
G		Shelf Panel	1
H		Back Panel	1
I		Left Door Panel	1
J		Right Door Panel	1
K		Leg	4
L		Support Leg	1

Step 1
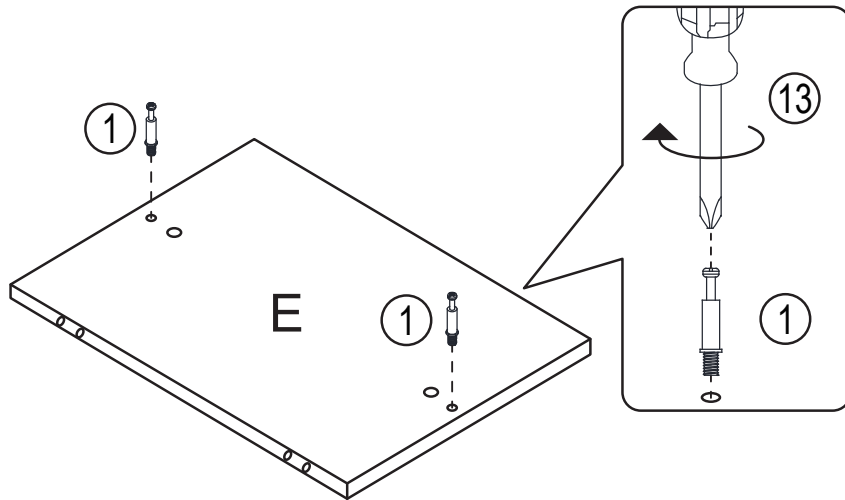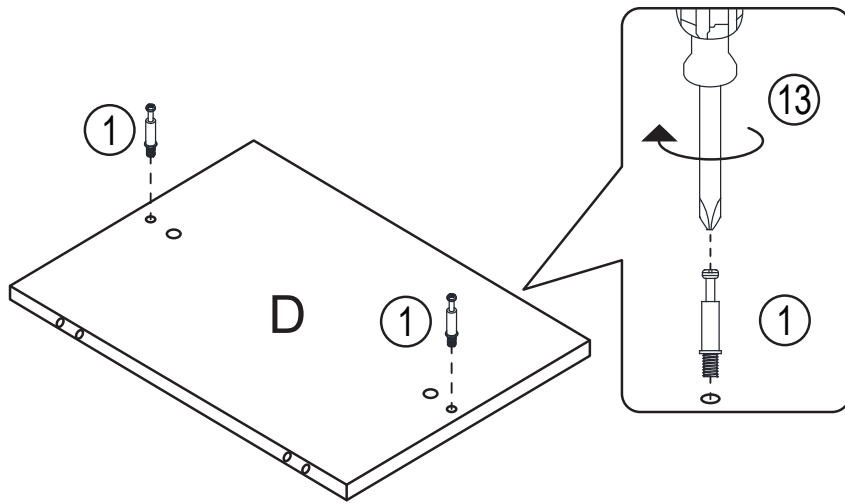
Insert Cam Bolt(①) into the mounting positions on Middle Left Side Panel(D) and Middle Right Side Panel(E) using Screwdriver(⑬) as shown.

Step 2
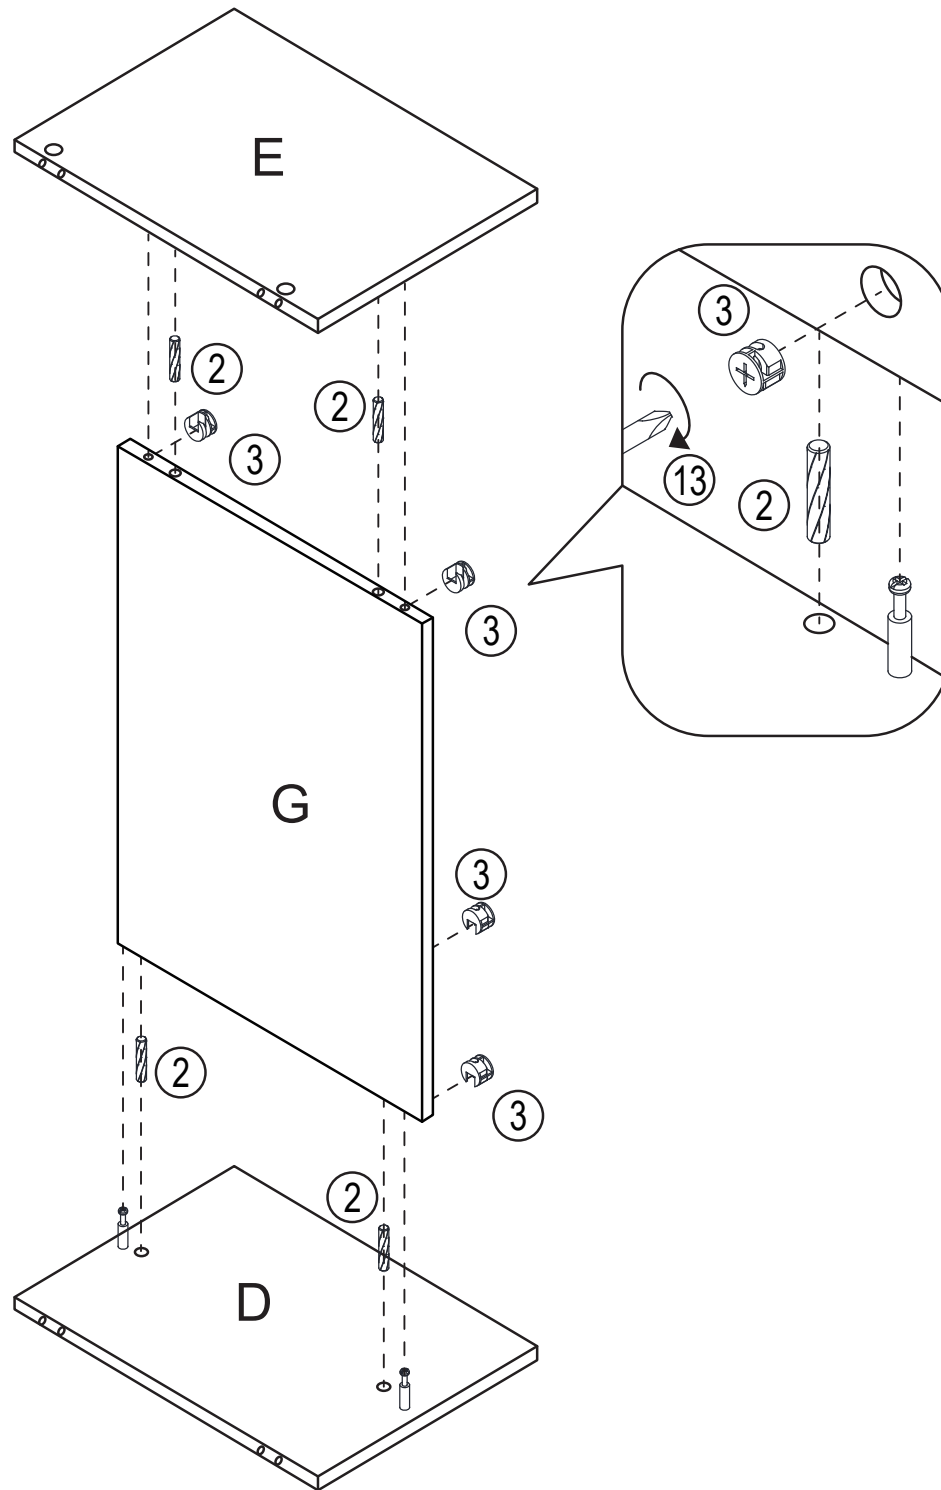
Attach Middle Left Side Panel(D) to the Shelf Panel(G) with Dowel(②), then insert Cam Nut(③) into Shelf Panel(G) using Screwdriver(⑬). Attach Middle Right Side Panel(E) to the Shelf Panel(G) with Dowel(②), then insert Cam Nut(③) into Shelf Panel(G) using Screwdriver(⑬).

Step 3
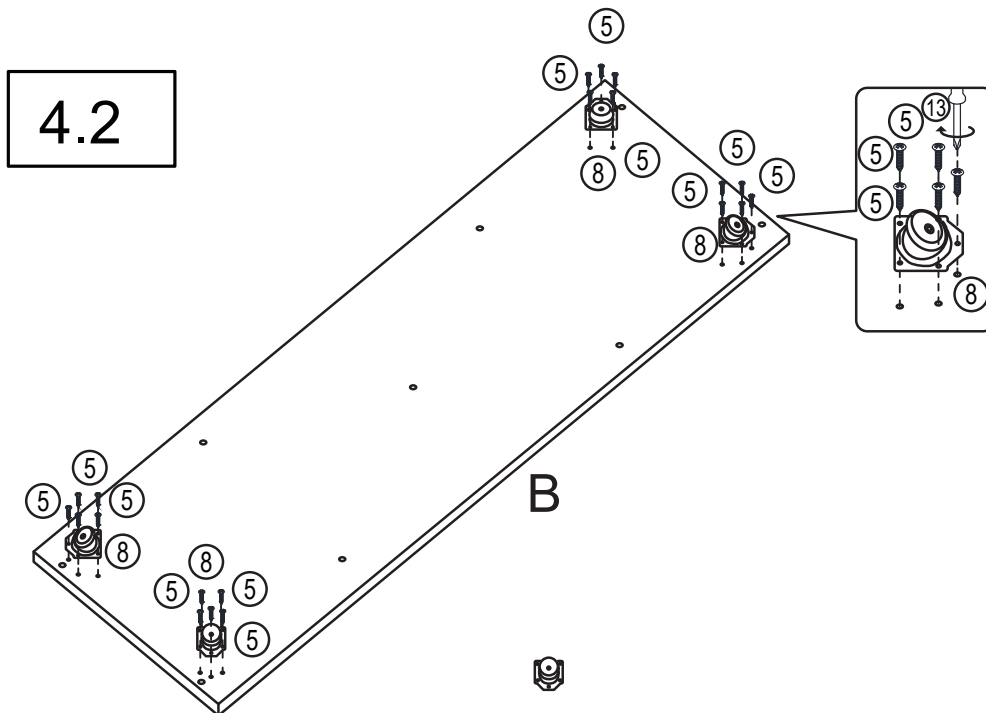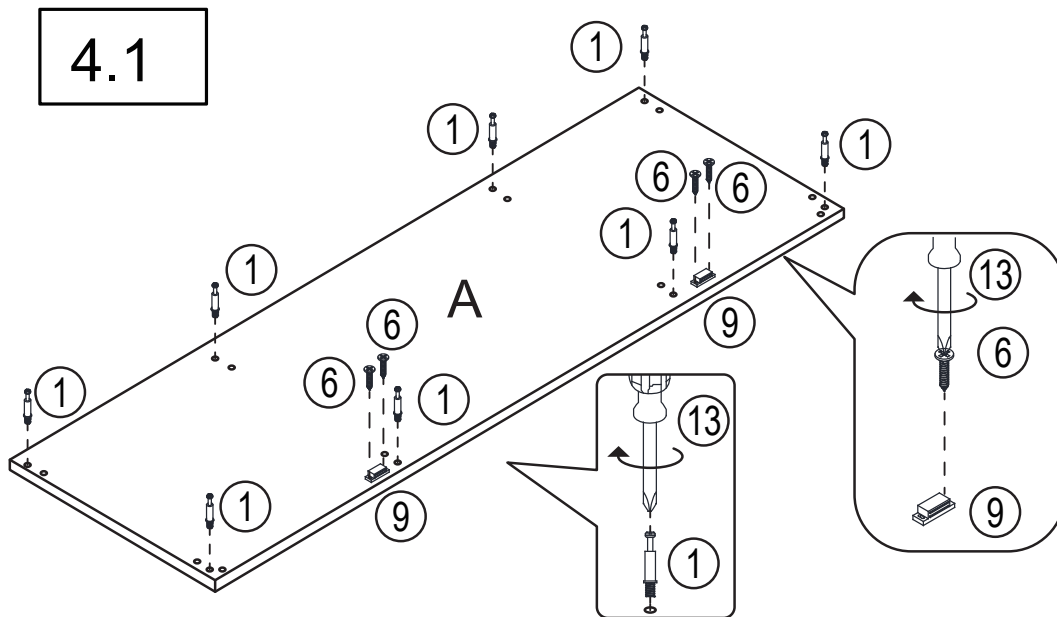
4.1) Insert Cam Bolt(①) into the mounting positions on Top Panel(A) using Screwdriver(⑬) as shown. Attach Magnet(⑨) to the Top Panel(A) using Screw(⑥) with Screwdriver(⑬) as shown.
4.2) Attach Metal Plate(⑧) to the Bottom Panel(B) using Screw(⑤) with Screwdriver(⑬) as shown.

Step 4
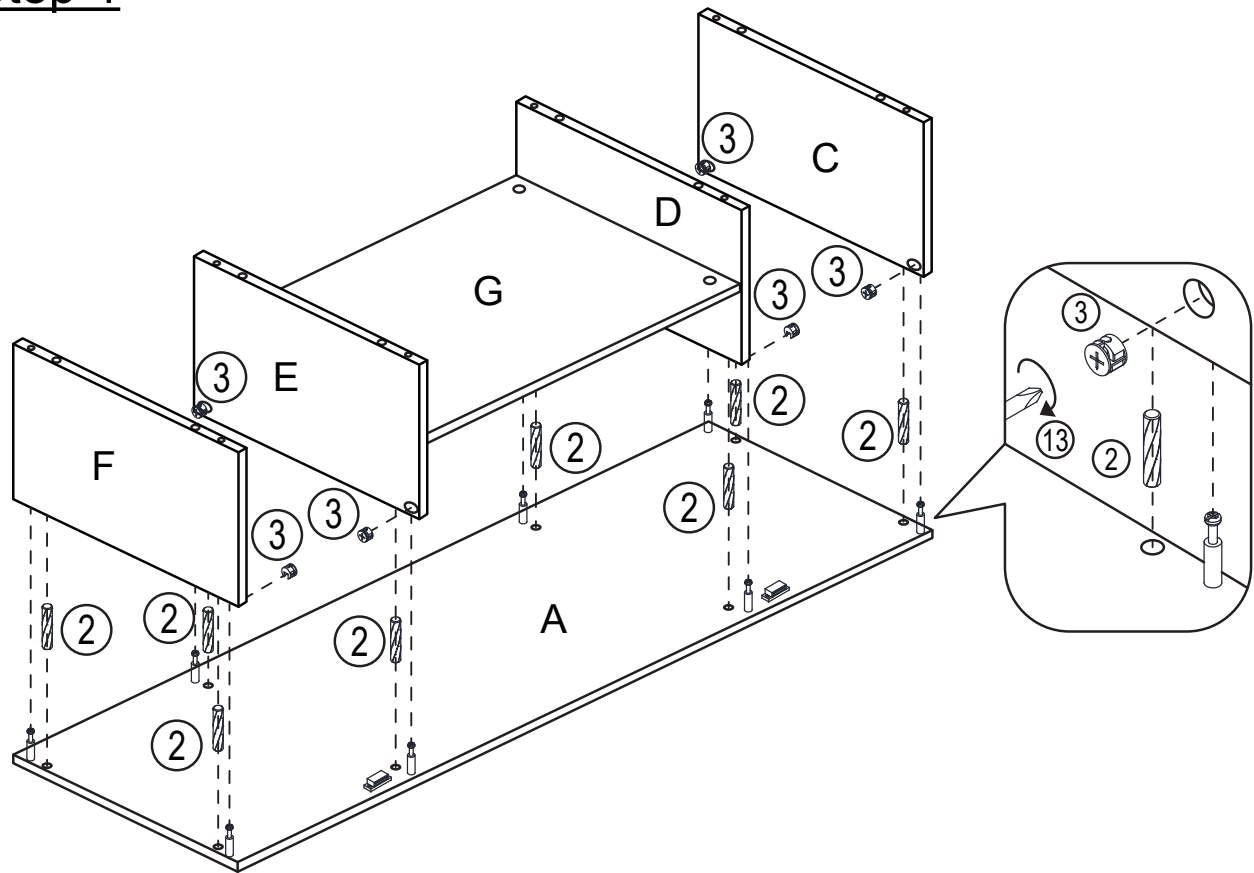
Attach Left Side Panel(C), Middle Left Side Panel(D), Middle Right Side Panel(E) and Right Side Panel(F) to the Top Panel(A) with Dowel(②), then insert Cam Nut(③) into Left Side Panel(C),Middle Left Side Panel(D),Middle Right Side Panel(E) and Right Side Panel(F) using Screwdriver(⑬) as shown.

Step 5

Step 6

7.2

13
12
2

12

12

12

12

12

12

12

B

2

2

2

10

2

2

2

C

I

12

12

2

10

D

2

2

10

A

G

2

E

J

10

7.1

F

10

10
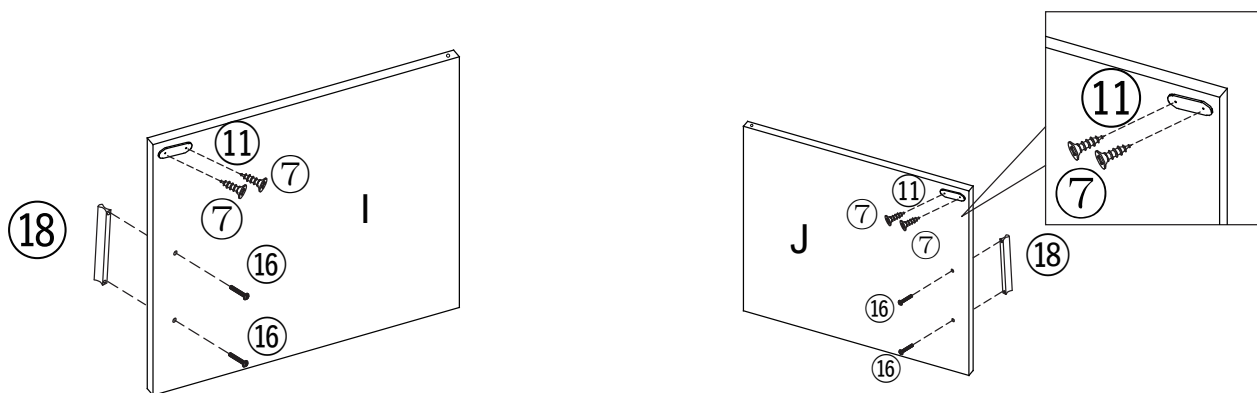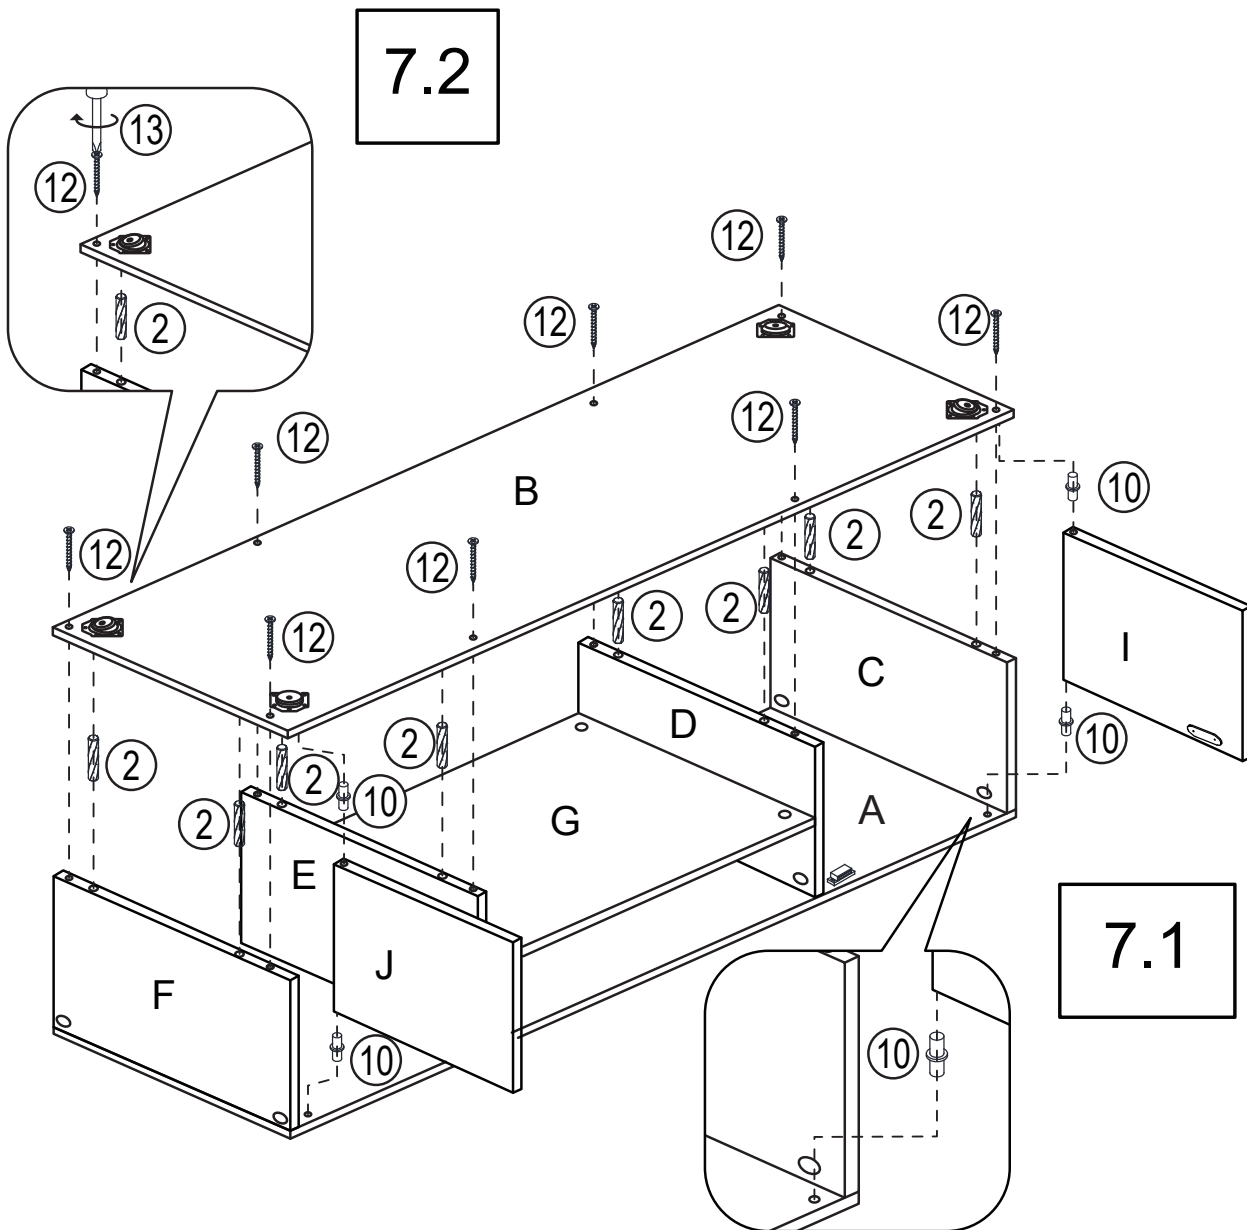
7.1)Attach Left Door Panel(I) and Right Door Panel(J) to the Top Panel(A) with Door Pin(⑩).
7.2)Attach Bottom Panel(B) to the Left Side Panel(C), Middle Left Side Panel(D), Middle Right Side Panel(E) Right Side Panel(F), Left Door Panel(I) and Right Door Panel(J) with Dowel(②), then insert Screw(⑫) into Bottom Panel(B) using Screwdriver(⑬) as shown.
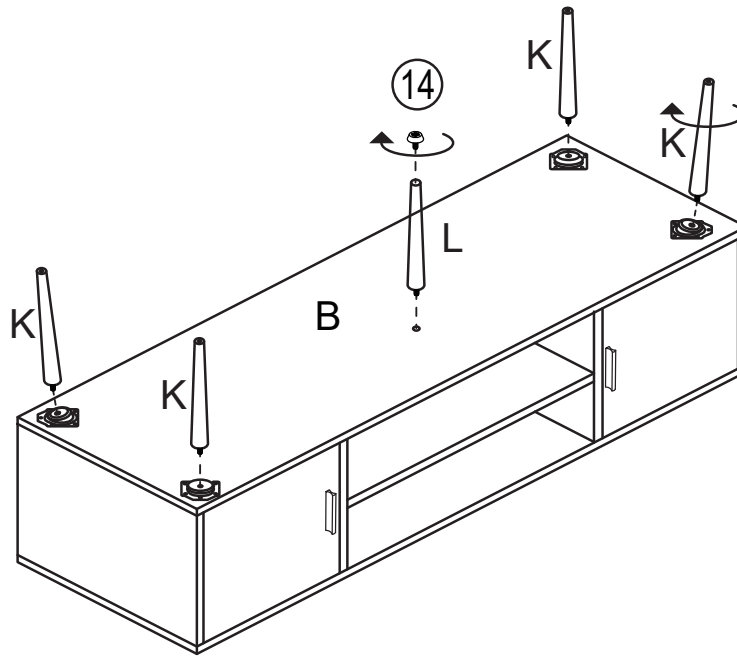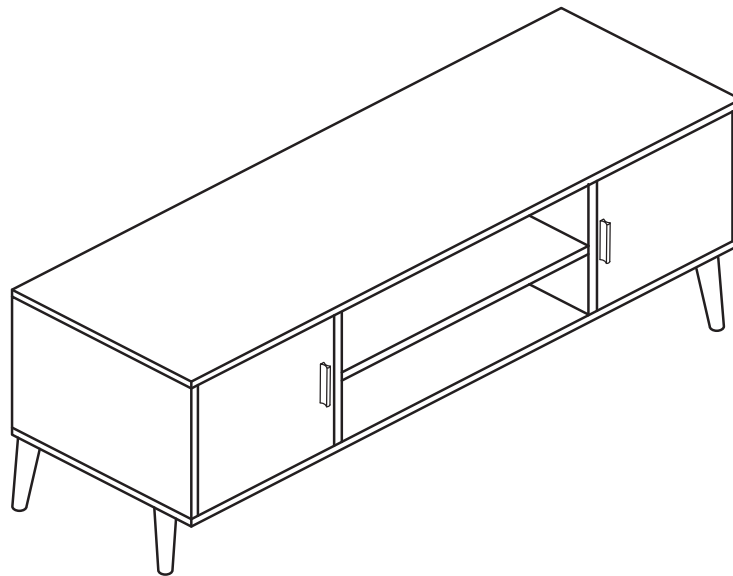
Step 7

A

C

13

4
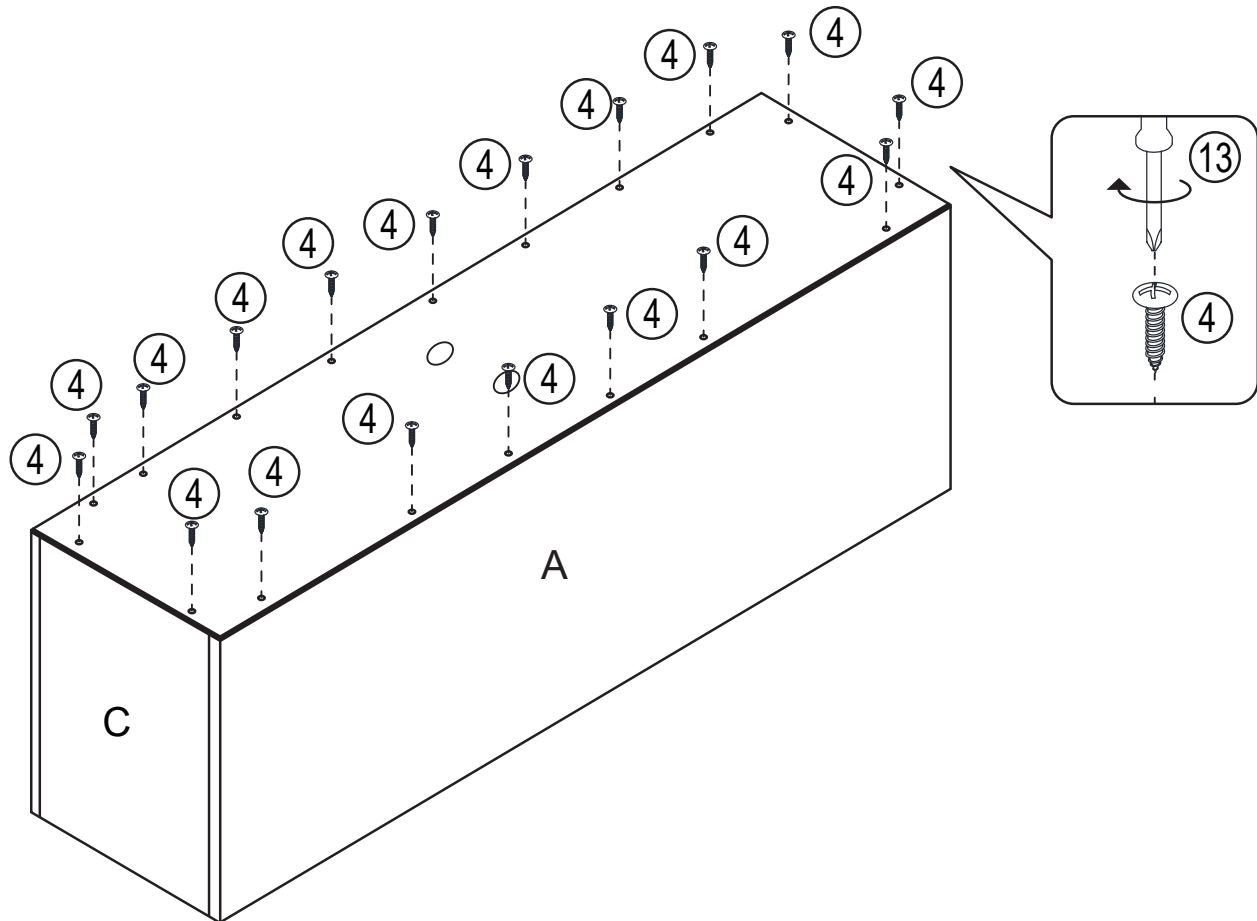
Attach Back Panel(H) to the Left Side Panel(C), Right Side Panel(F),
Bottom Panel(B) and Top Panel(A) using Screw(④) with Screwdriver(⑬)
as shown.

Step 8

Attach Leg(K) and Support Leg(L) to the Bottom Panel(B), and then turn all legs clockwise to fasten them tightly.

Step 9

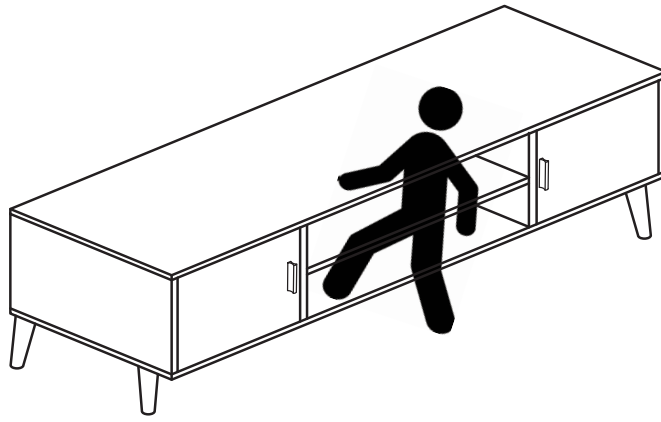Your Tv Stand is ready for use.
This Tv Stand can only be used on a flat,level surface.
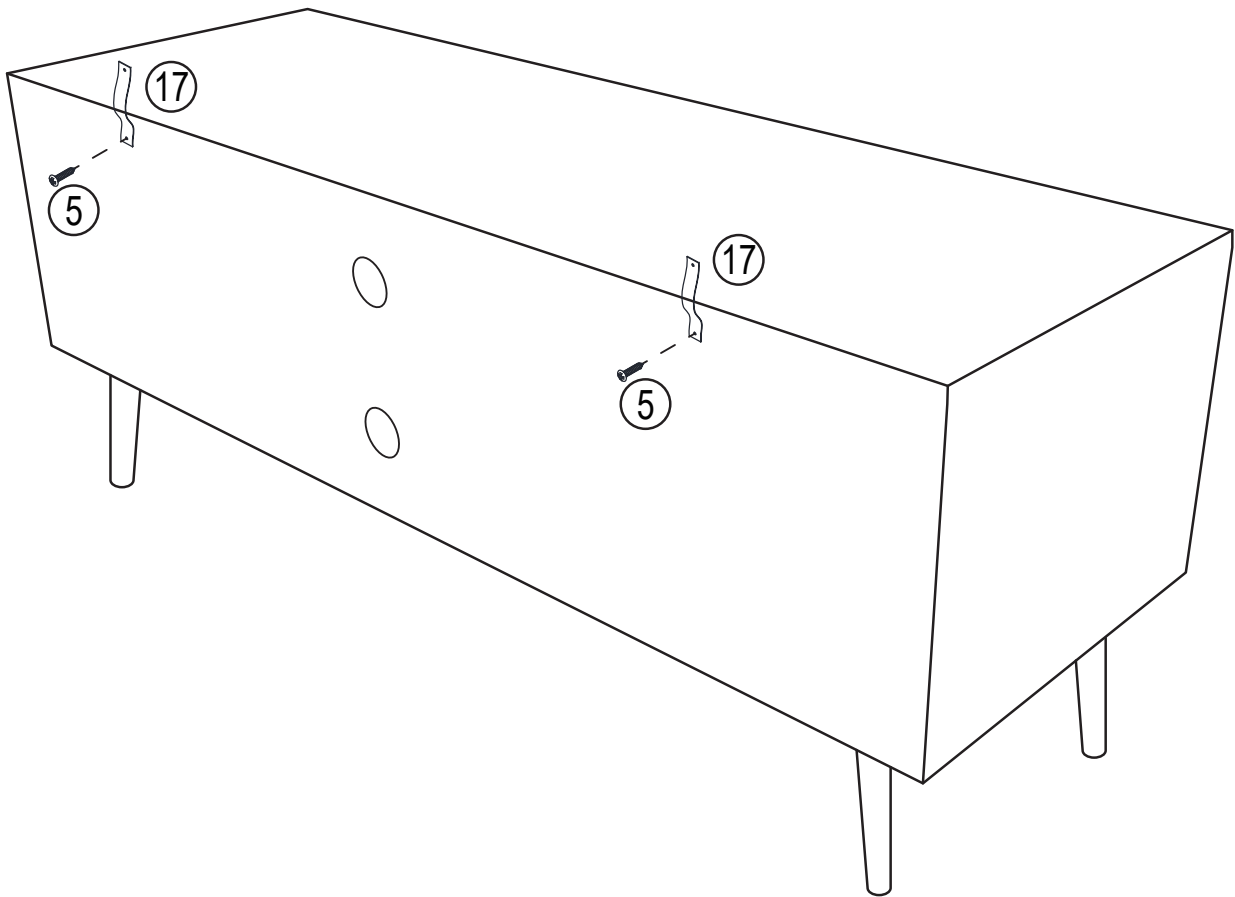
⚠ **WARNING**

Serious or fatal crushing injuries can occur from tipping furniture.To help prevent tip-over: ALWAYS secure this furniture to the wallusing Cabinet Restraint Device.See product instructions for more ways to help prevent furniture tip-over.
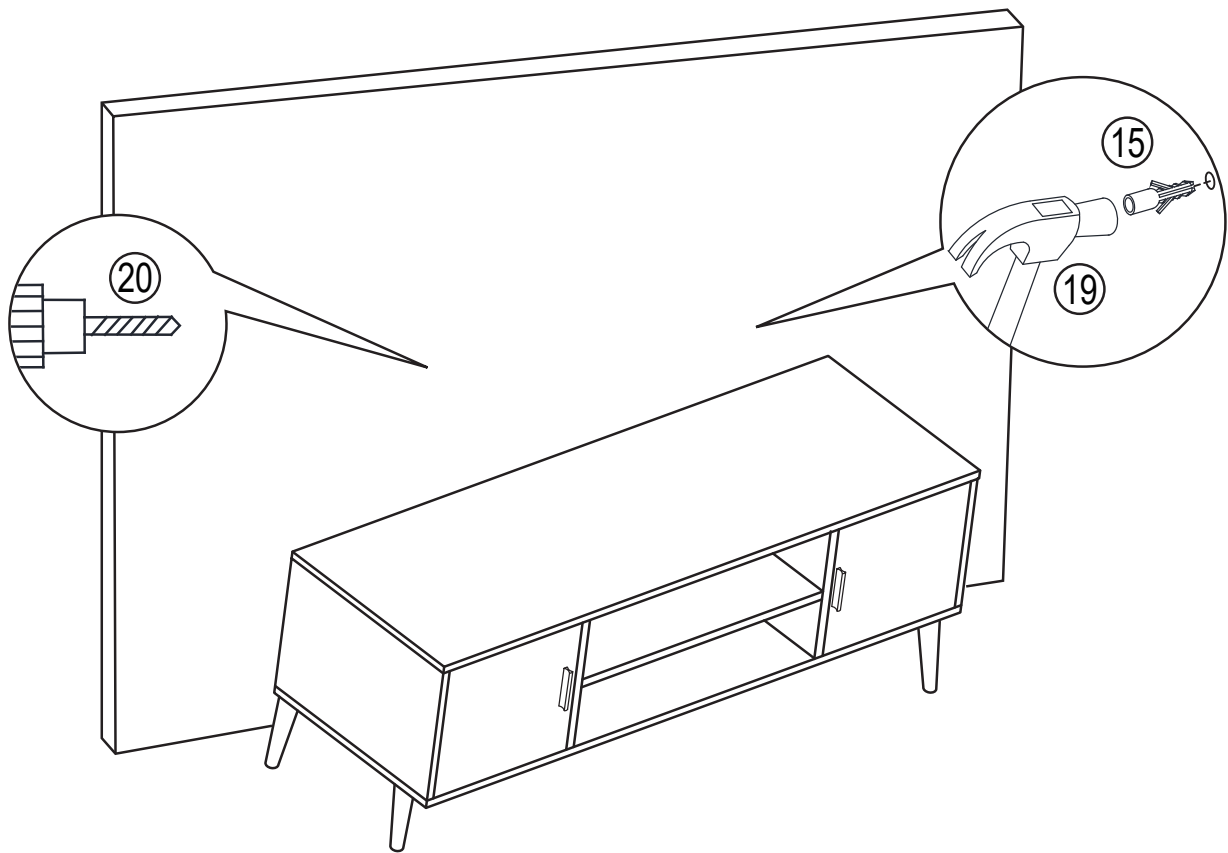
Usage For Cabinet Restraint Device：

Step 10

Step 11

5.1) Drill two mounting positions on wall with Power Drill(⑳).
You can mark these points in two ways as below:
1) Move the Table back to the wall.
Note: The restraint strap need to be secured to solid, load bearing surface.
Please use a Stud Finder(not supplied) if needed to locate the Wall
Frame.
2) Measure the height of Restraint Strap (⑰) with ruler/measuring tape
and mark on wall to keep them accurate and same height.
5.2)Insert Wall Anchor (⑮) into drilled mounting positions on wall with
Hammer(⑲).

Step 12