


Assembly Instruction


Large Rattan Nightstand

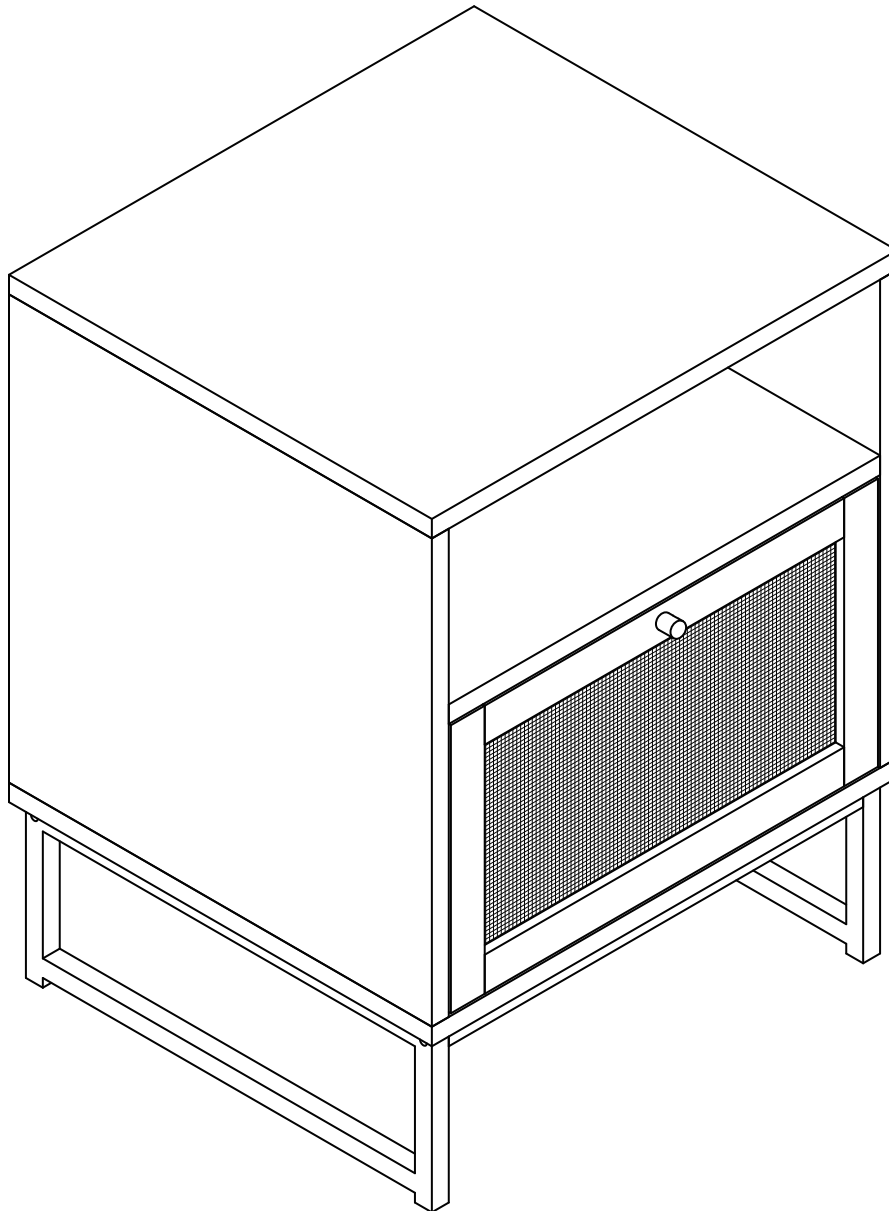


2 PERS.




30 MIN

















SLOTTED SCREWDRIVER(Not Provided)










POZI SCREWDRIVER(Not Provided)

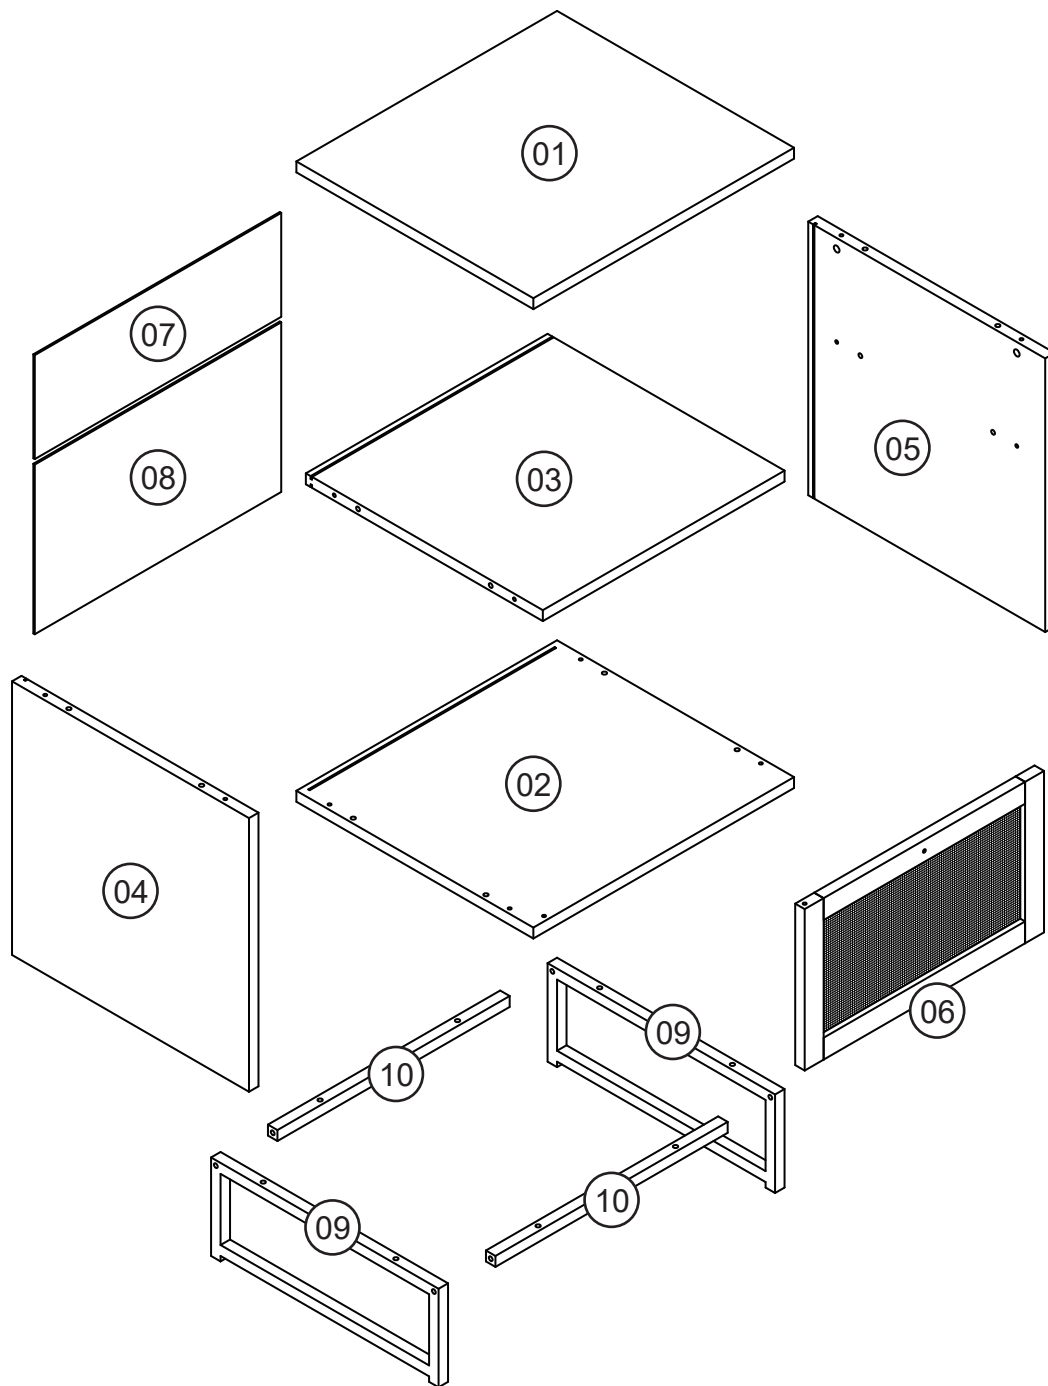



A	x8	B	x8	C	x14	D	x8	E	x4
									
						4x28mm		4x40mm	
F	x4	G	x1	H	x1	I	x4	J	x1
									
6x35mm						3x14mm			
K	x2	L	x8	M	x8	N	x1		
									
				3x14mm					

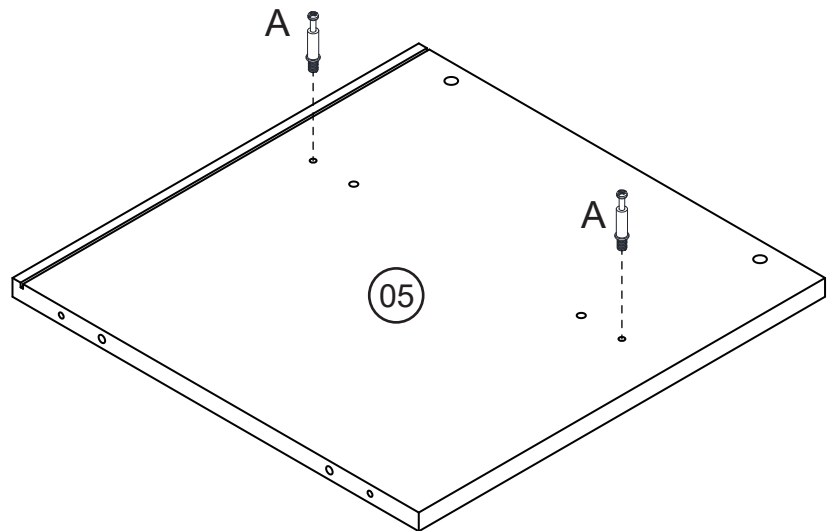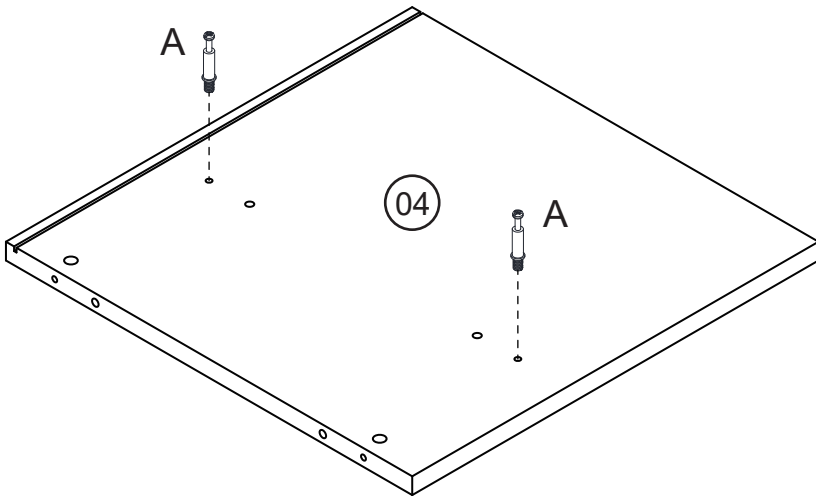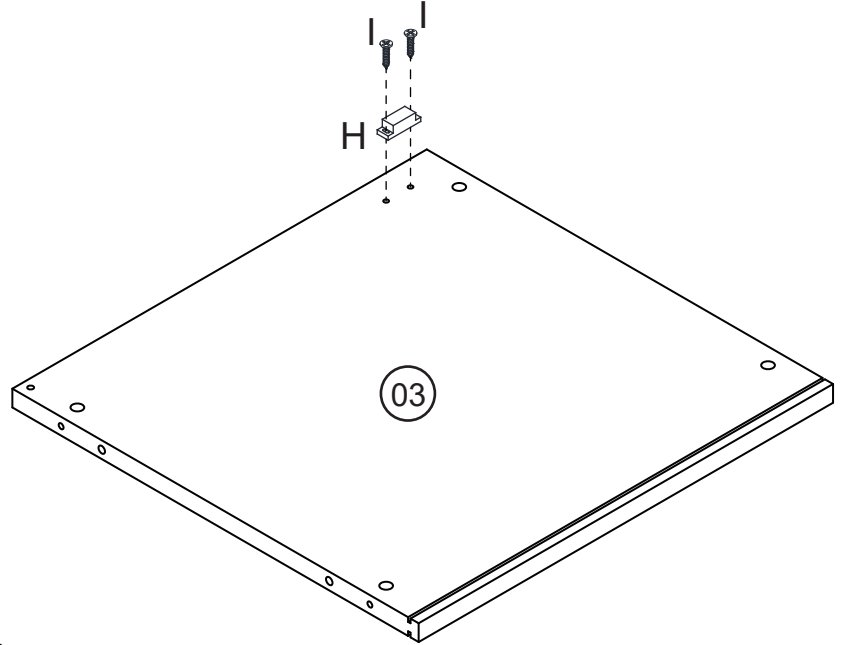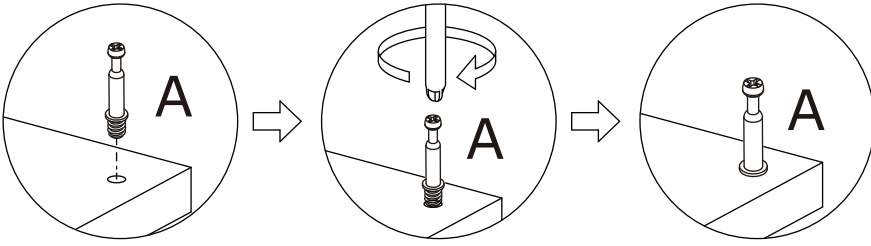

1




A	x4	H	x1	I	x2
					
				3x14mm	

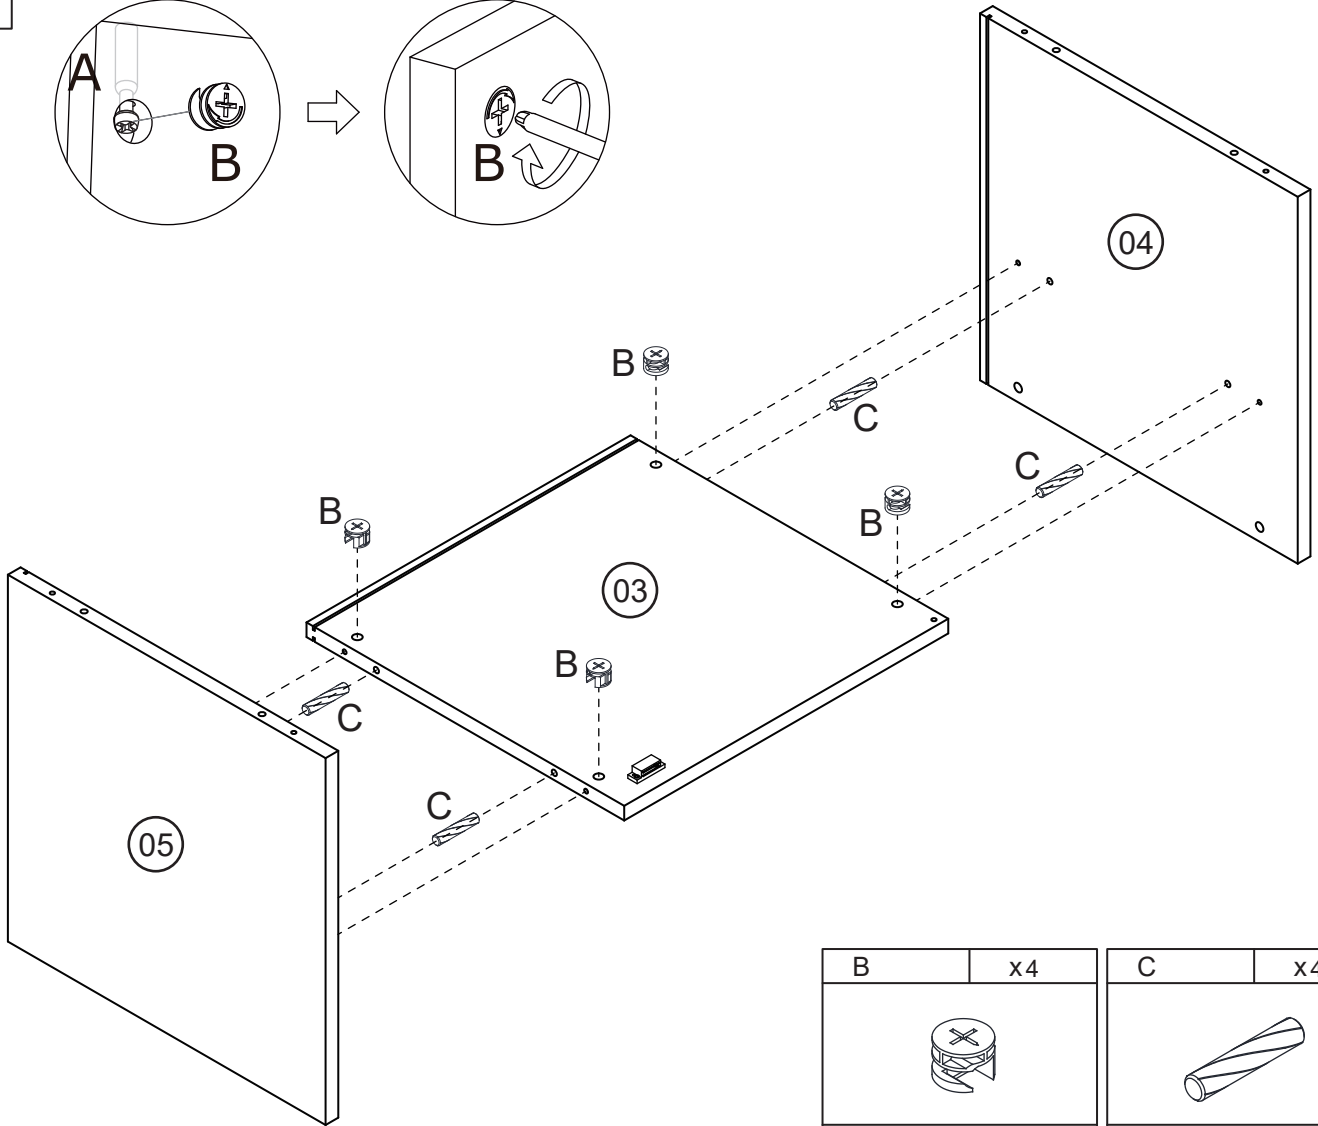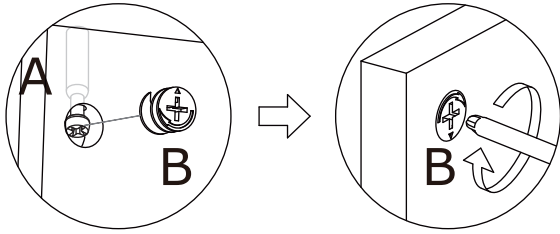
2





B	x4	C	x4
			

3

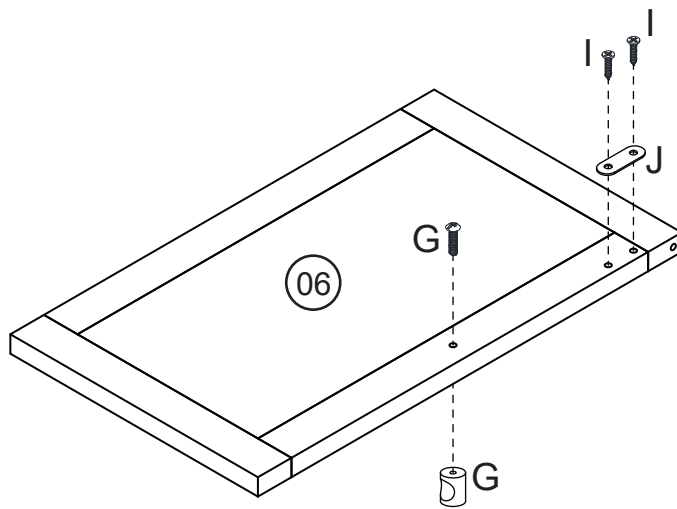



G	x1
	


I	x2
	
3x14mm	


J	x1
	


4

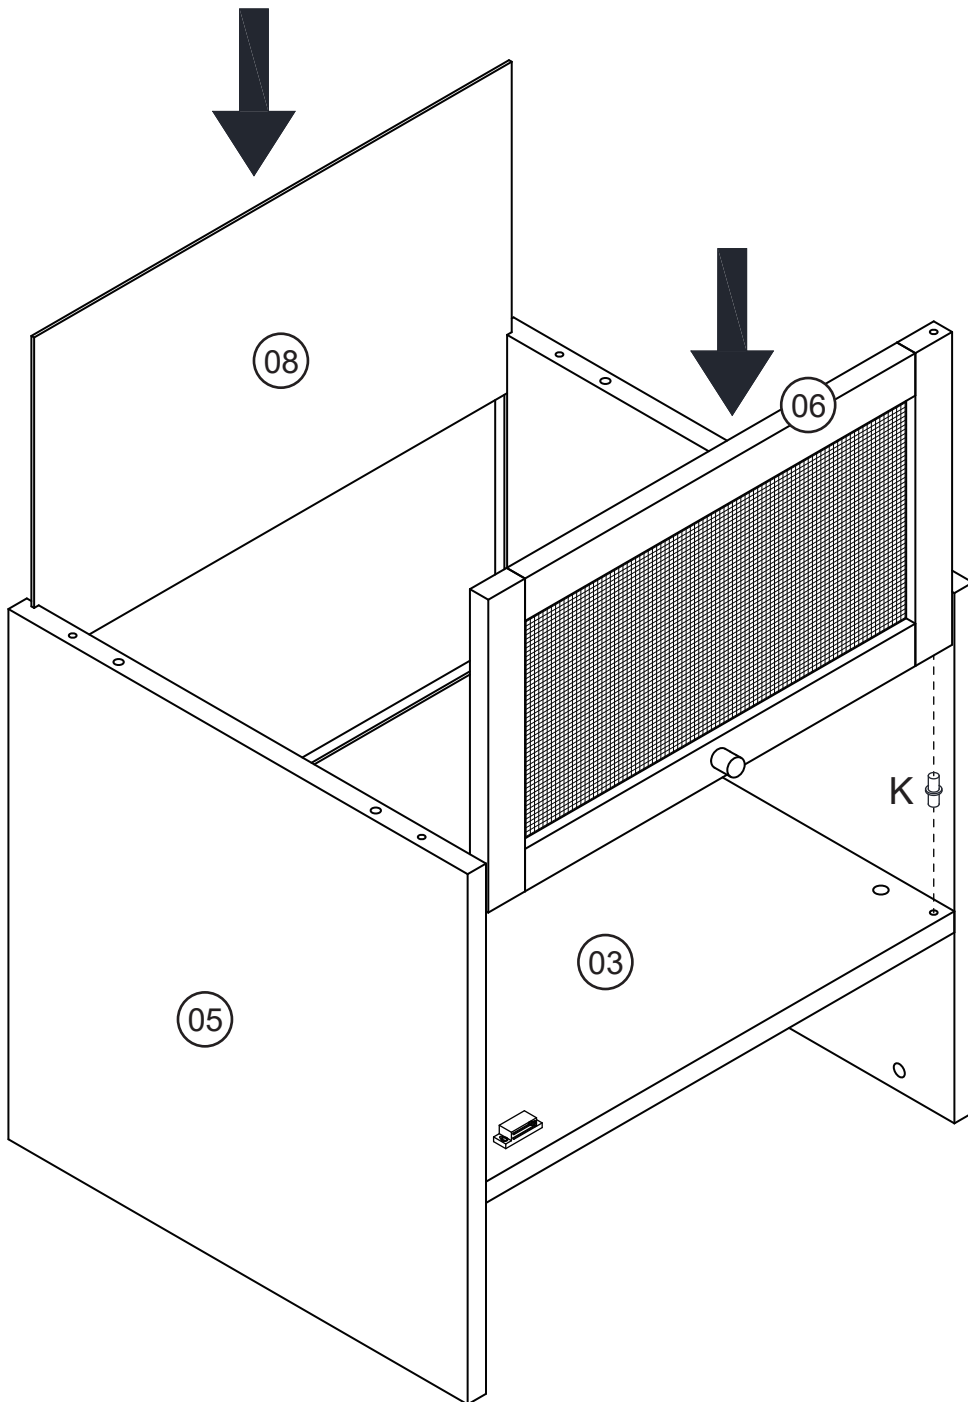


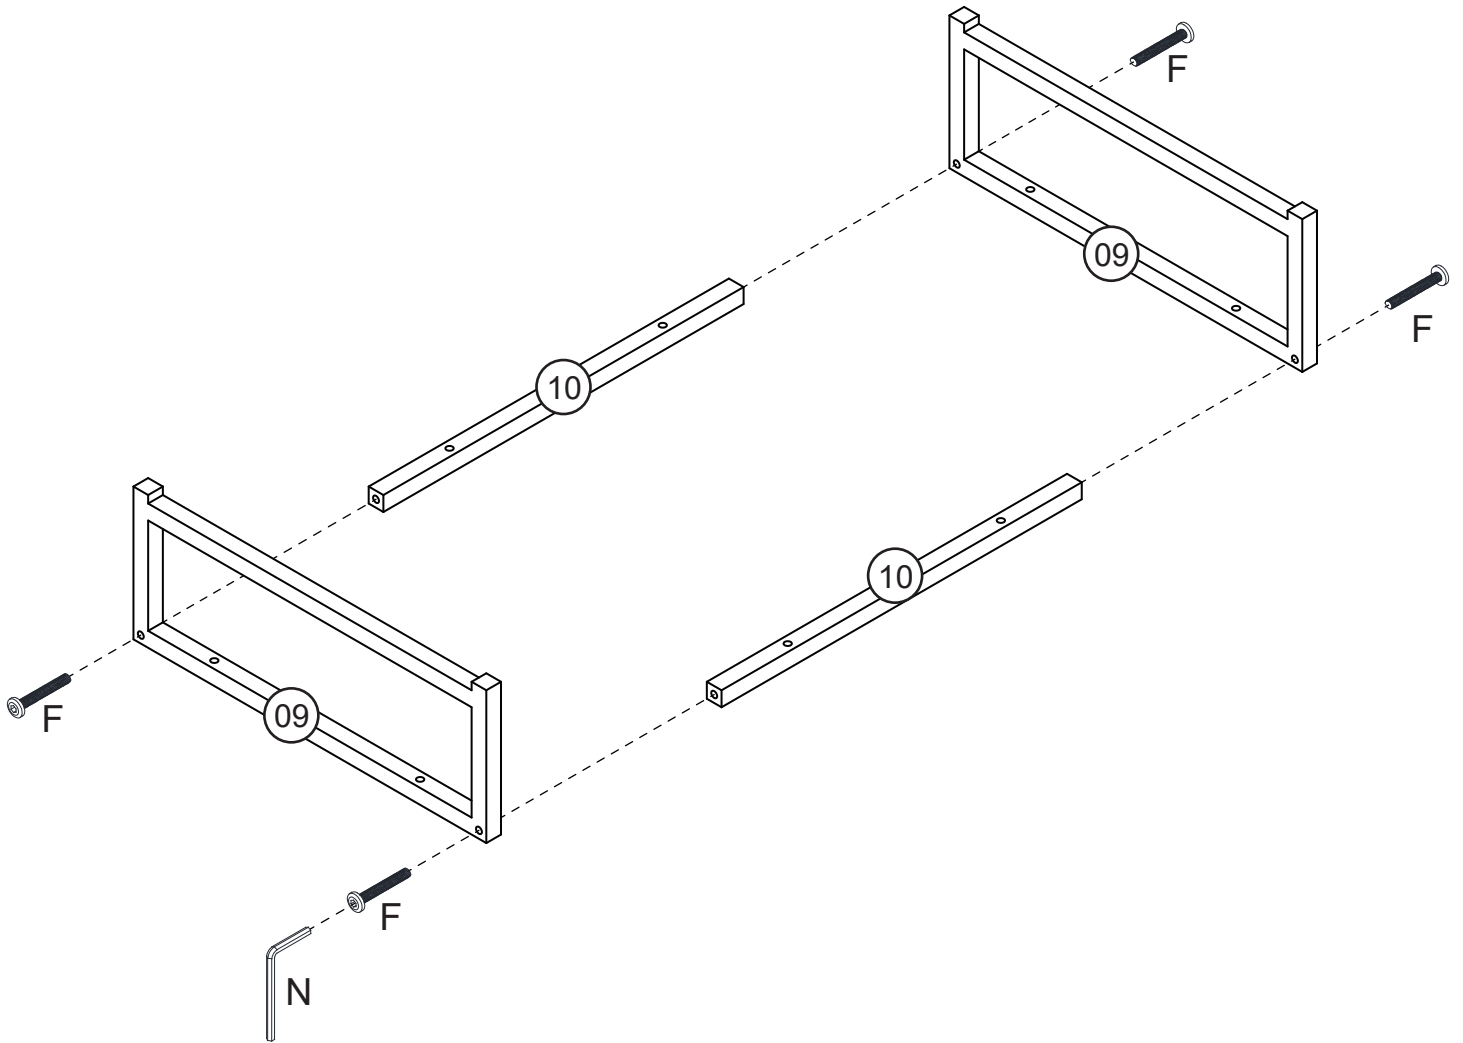
K	x1
	

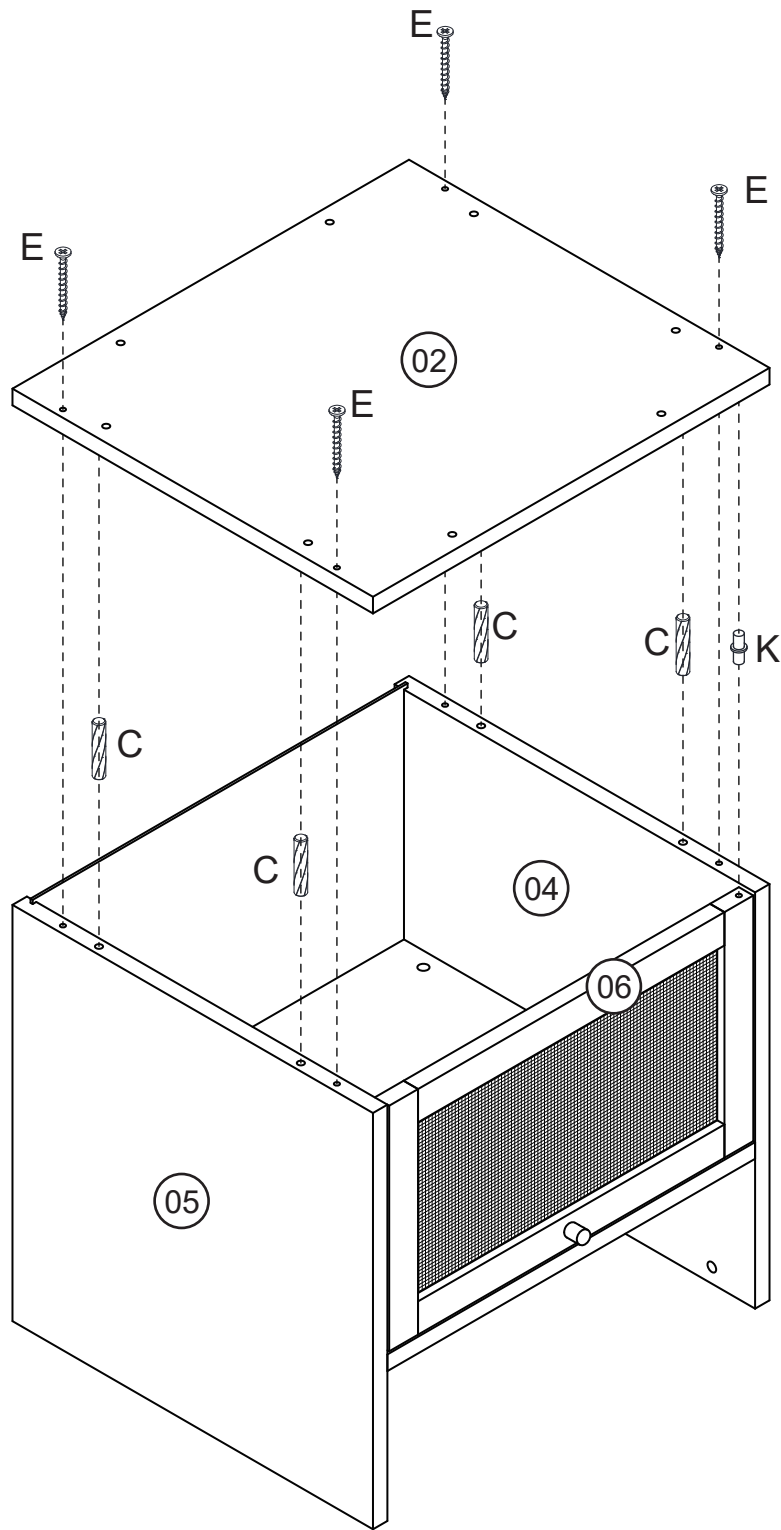




K	x1
	


C	x4
	

E	x4
	
4x40mm	




F	x4	N	x1
			
6x35mm			


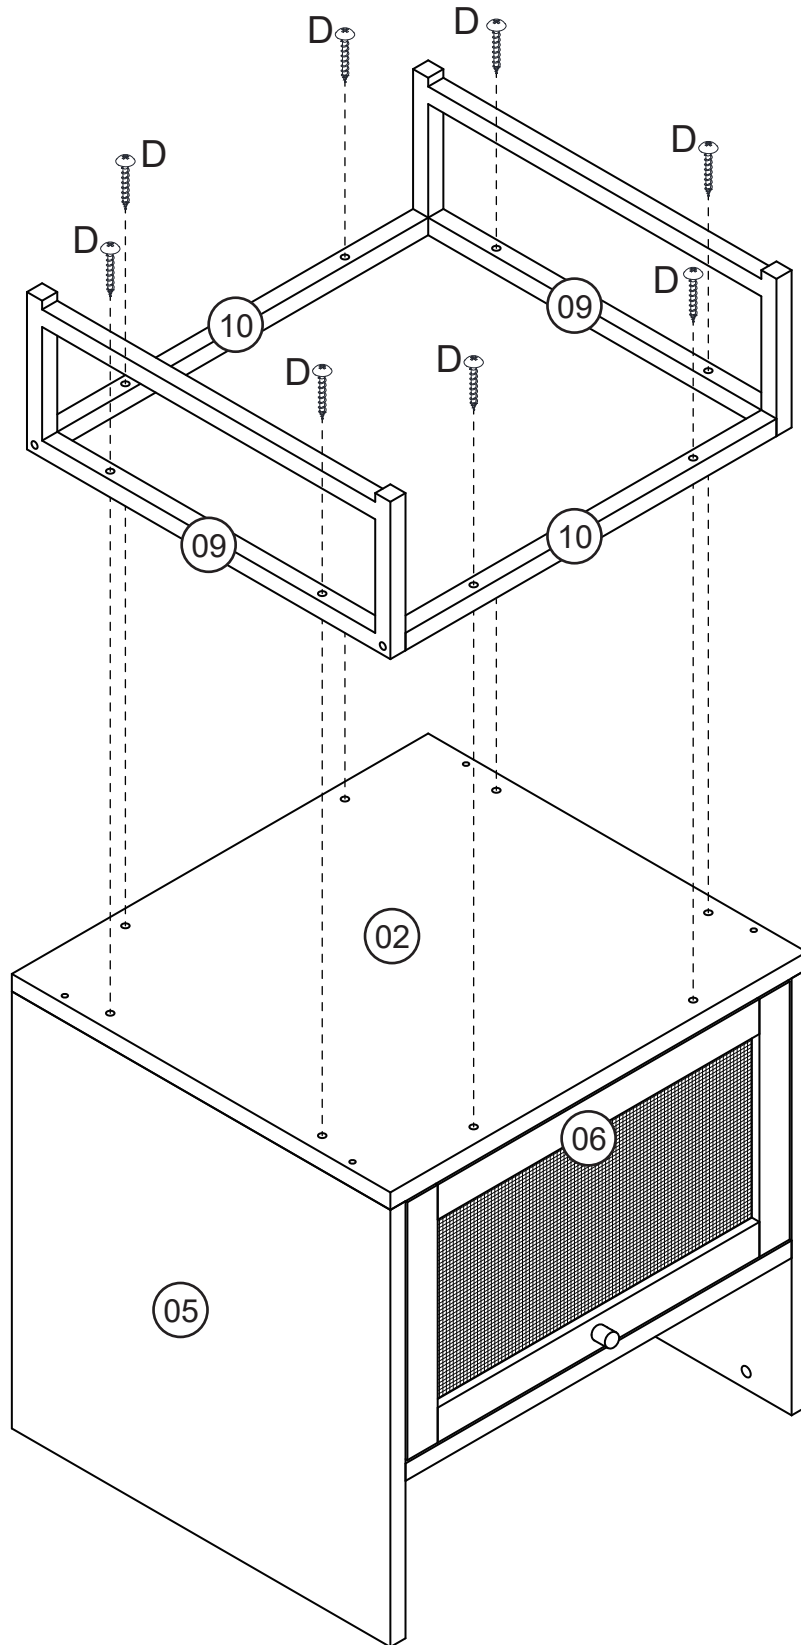


D	x8
	
4x28mm	



8

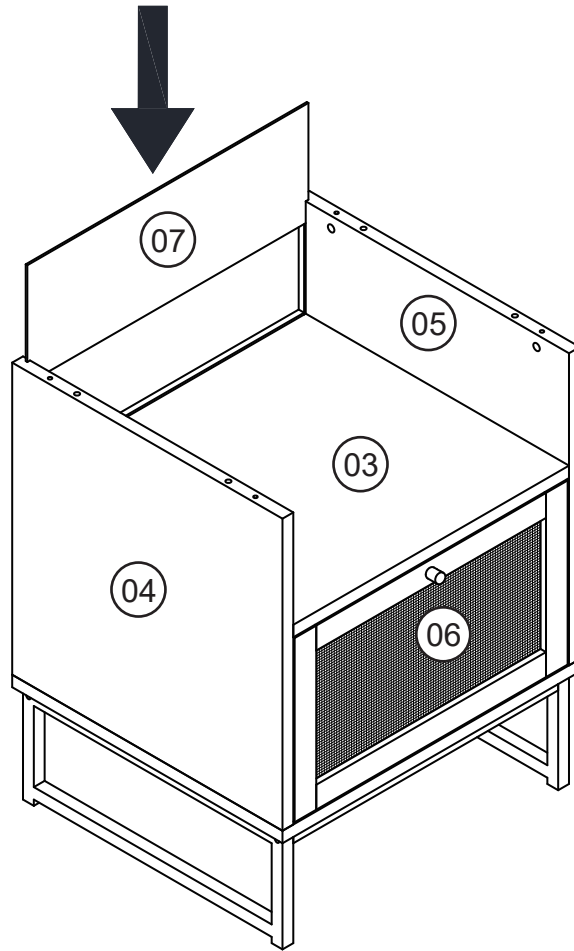




9

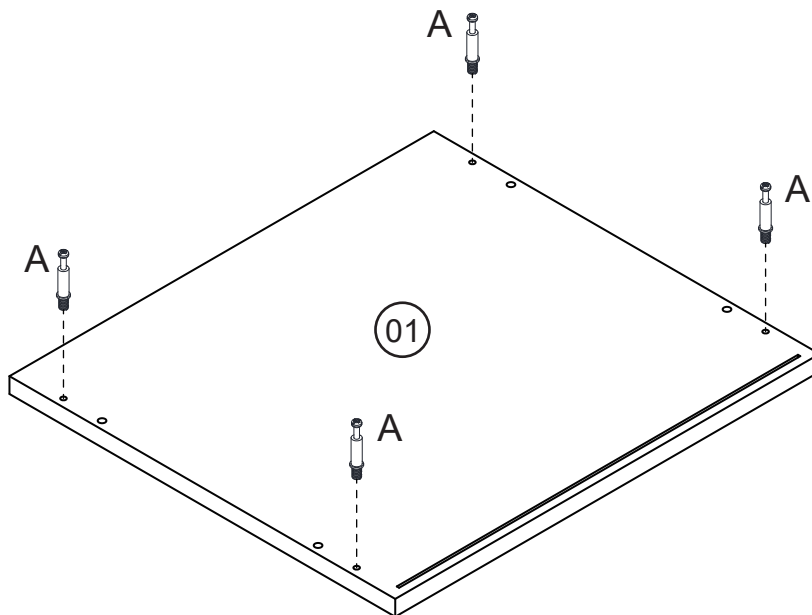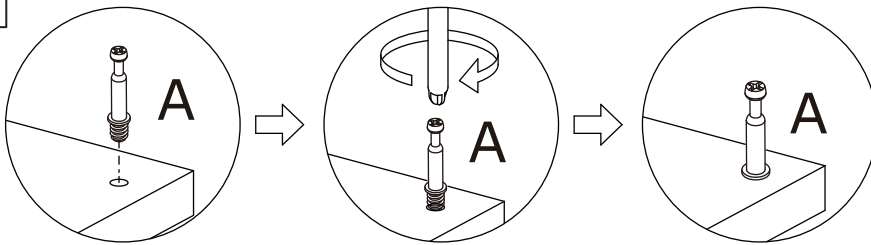



A	x4

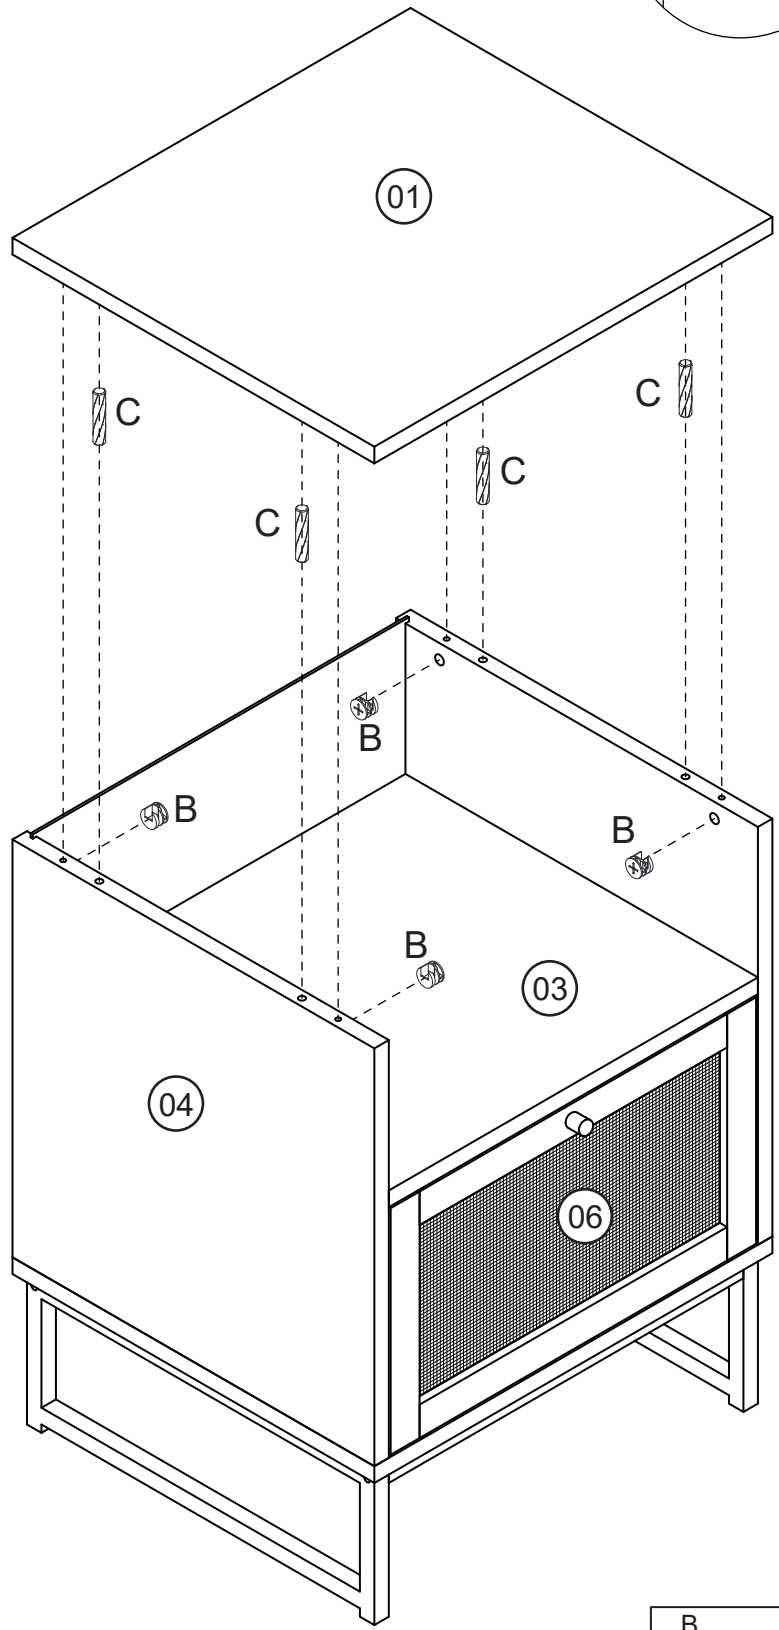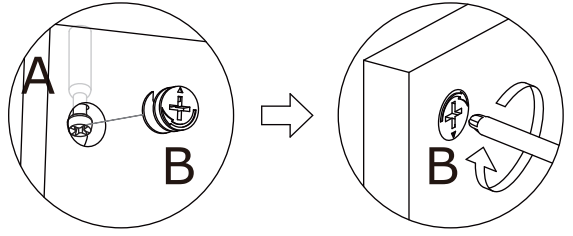

B	x4	C	x4
			

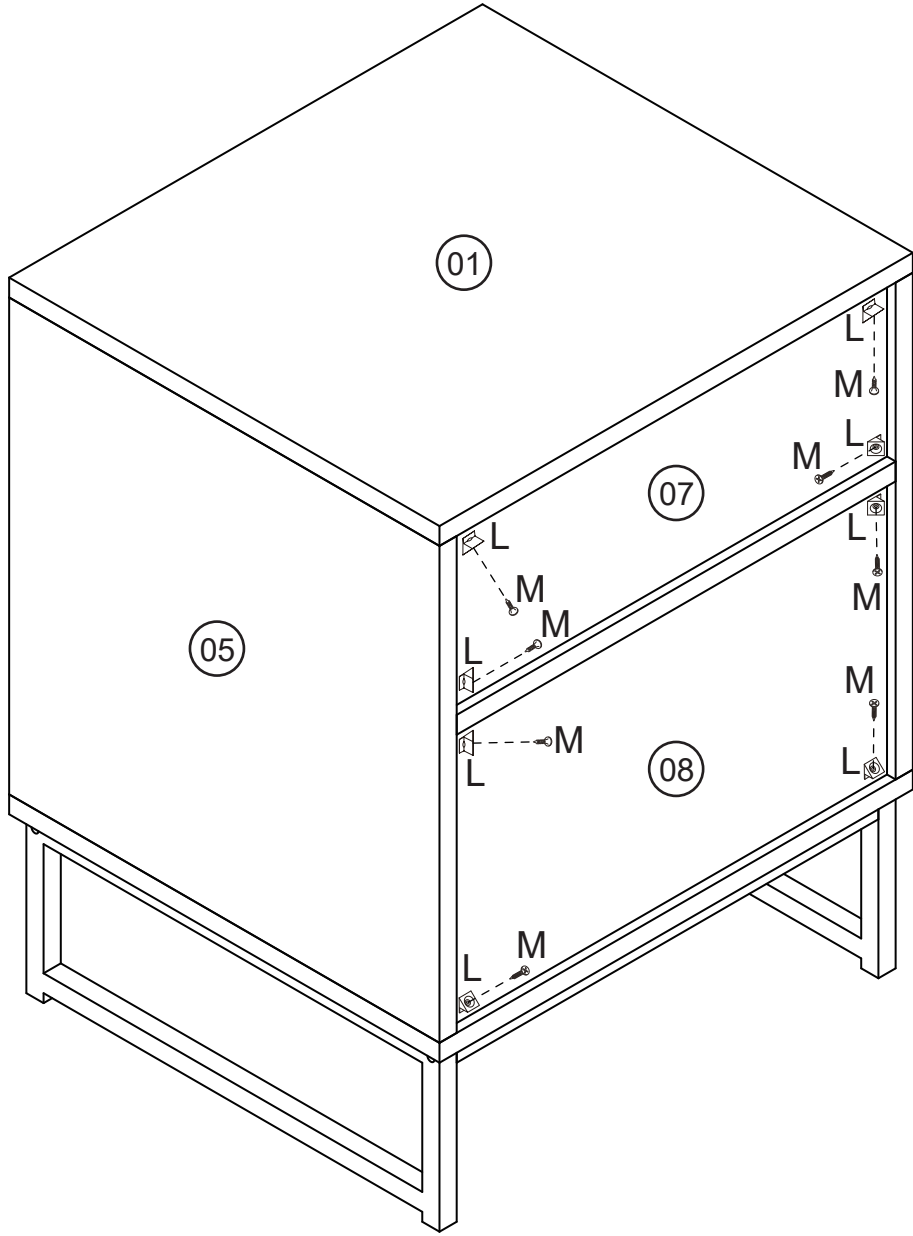

L	x8	M	x8
			
		3x14mm	