Controller Introduction


	Press and hold the " key of the hand controller, the lift table rises, and release the key to stop;
	Press and hold the " wey of the hand controller, the lift table will descend, and release the key to stop;
	If for any reason the motor to adjust the table is not responding as intended, a hard reset may be needed. Please perform the following steps to reset the motor:
Reset operation	Press and hold the " key until 5 seconds after the lifting leg stops, the reset starts, do not release the " at this time key, the lifting legs slowly descend to the lowest end, when all the lifting legs reach the lowest end and rebound 1cm, release the " key, the reset operation is over.
	If there is an emergency during the reset process, you can release the "" key at any time, the lifting leg stops running, and the bit terminated. After the reset is terminated, the reset operation needs to be performed again until the reset is successful, otherwise other operations cannot be performed.

USER MANUAL


Sit and Stand Desk Assembly Instruction





• Vertical Range: 28.3-46.5in (72-118cm)

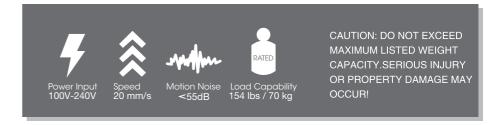


COMPONENT LIST

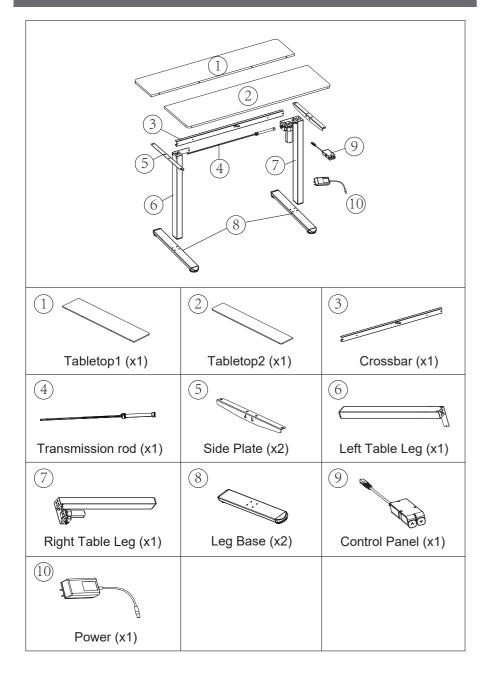

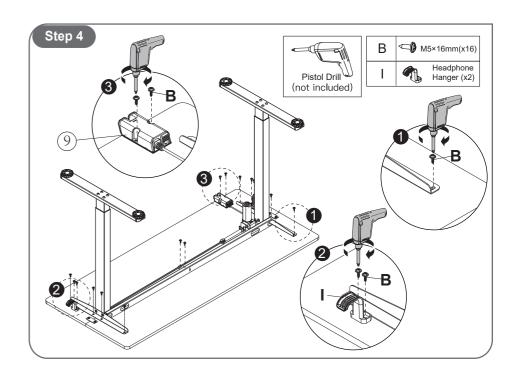

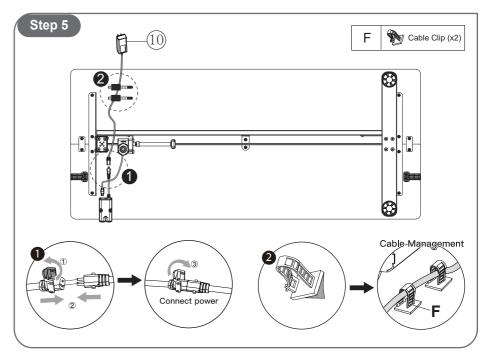

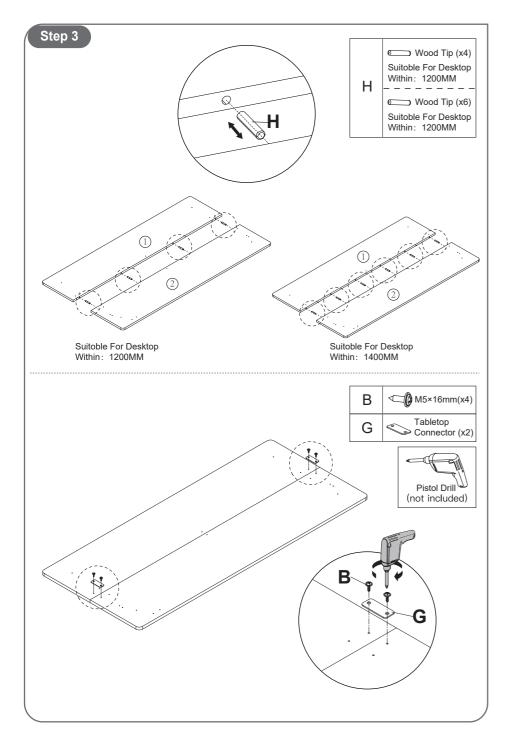

HARDWARE LIST

